



ADVENTURE VAN RENTAL

TOUR50VANS.COM

704.773.9355



PACKING LIST

Included

- Camp Table
- Camp Chairs (2)
- Dometic CFX35 Refrigerator
- RTIC 45L Cooler
- Bed Sheet (1)
- Hand Towels (2)
- Cutting Board
- Audio Adapter Cable
- 12v USB Adapter
- First Aid Kit
- Fire Extinguisher
- Dust Pan/Brush
- Floor Mats (2)
- Deck Of Cards
- Portable Bucket Toilet
- Portable Bucket Toilet Bags (Fee)
- Tent (Fee)

SUGGESTED PACKING ITEMS

- Additional Bedding
- Pillows
- Lighter
- Cooking Utensils
- Dish Soap
- Hand & Soap / Hand Sanitizer
- Ice for Cooler
- Toiletries
- Flashlight / Lantern
- Additional Water Bottles
- Drinking Cups
- Coffee Press / Mugs
- Toilet Paper
- Foldable Shovel
- Leatherman Or Multi Tool
- Bug Spray
- Blue Tooth Speaker



INTERIOR AMENITIES

REFRIGERATOR/FREEZER (IF EQUIPPED)

The Dometic CFX3 35 fridge has 36 liters of space. When you pick up the van it is set to cool to 37 degrees Fahrenheit. This is the best temperature to keep everything cold without freezing items at the bottom of the fridge.

To power on the Dometic fridge, hold the power button until the LED screen illuminates you'll see the current temperature. Press the set button to see what temp the fridge is set to and change it to your desired temperature using the plus & minus buttons. The fridge also has an extra USB port for charging devices if needed. When in use, be sure to close the lid tightly, listen for a "click".

RTIC 45 COOLER

This cooler is for the convenience of easy-access, or extra cold storage. Feel free to store drinks and other "quick access" items on ice, while not disturbing the perishable food storage items in the fridge. It can be carried by one person. The cooler can do double duty as a bench, non-slip step stool, and a tabletop while keeping ice and supplies cold. Can be locked (lock not included).

GALLEY /SINK

The sink system consists of a 5-gallon fresh tank (blue tape stripe), a 5-gallon gray tank and a pump. All are located in the galley cabinet under the sink. To use the sink, first fill the 5-gallon fresh tank, turn the pump switch (located on the wall above the sink) to the "on" position, lift the glass-top sink lid, swivel the faucet up into a useable position, gently open the valve to desired flow.

Remember, it's only 5-gallons and should be used sparingly. When water runs low, the pump will start to make a gurgling sound, indicating that it's pulling air. Shut the wall switch "off" to avoid draining the battery and/or damaging the pump.

Before refilling, you must empty the gray tank. To empty the gray tank, twist the hose connection loose, (Use the supplied towel to catch excess water from the drain line). This tank can be drained outside of the van in a safe place. Re-attach the gray tank and hose connection. It is recommended to empty the gray tank daily, as to not over-fill.

To refill the fresh tank, disconnect quick connect hose at the top of the tank, remove the tank and refill with potable water. (Use the supplied towel to catch the excess water from the water line.) Re-attach the fresh tank and hose connection. You can now turn the pump switch back on. The pump will run for a short time while the line pressurizes.

PORTABLE TOILET (IF EQUIPPED)

The Bucket Toilet is simply a 5-gallon bucket, with a biodegradable waste bag and a latching toilet seat lid. This is useful if camping where there's no bathroom amenities, or in emergency situations. Used bags should remain in the bucket until you can dispose or bury it. The bag should be replaced after each use to avoid odor buildup. Extra bags will be provided.



DINING TABLE

The Lagun Dining Table will swivel 360 degrees and will lock right where you want it. When you pick up the van, it will be set in the standard dining height but can be adjusted by loosening the leg lever, attached to the base, then raise the leg up or down before tightening the lever again.

To convert the table into a bed:

1. Loosen the top post lever, Lift the table top up off the post, set aside.
2. Loosen the low post lever, Lift the post up, off the track and store.
3. Place the table top between the benches, on top of the silver track, at the rear.
4. Place the platform slats between the benches, on top of the silver track, filling in the gap moving towards the front.
5. Place the 4 seat back cushions in the gap, covering the table top and slats.

PASSENGER SWIVEL SEAT

The passenger seat swivels to offer additional seating in the living space. It is best to have the seat unoccupied and the passenger door open. Pull the seat forward using the adjustment bar below the seat. Unlatch the red handle, and rotate counterclockwise. The seat will not lock in place when in "swivel" mode. Always travel with the seat facing forward and latched.

EXTERIOR AMENITIES

BIKE RACK

Refer to manual documents.

- Compatible for bikes wheels 16"-29", up to 3.1" wide.
- Rated for up to 50/lb per bike spot.
- The rack has several positions, including the swing out position, which allows the barn doors to be open.

POWER SYSTEM

A 100aH house battery powers the systems in the living space and is isolated from the vehicle's starter battery. Two -100W solar panels on the roof supply power to the charge the house battery.

- Battery Monitor - The display on the upper end of driver side bench lists several details about the battery's status, including "% Remaining". Use this indicator to gauge when more solar charge is needed.
- Solar Panels - The solar panels work in both full and partial sun. Simply put, the more sun... the more charge.
- Lights - There are 2 light circuits, the main living area (6) and the rear cargo area (2). The main living area lights are dimmable. Tap the dimmer switch (located above the sink) to turn On or Off. Lightly hold your finger to the dimmer to adjust light level. Do not use a lot of pressure; a light touch is all that is needed. The rear cargo area has 2 non-dimmable lights and a switch located on the ceiling near the rear doors (black ceiling fixture).



- Vent Fan – Turn the twist knob to open the ventilation fan hood. Press the button to select the speed. The fan draws air from inside and exhausts to the outside. Press the Off button to turn off. Do not travel with the vent hood in the Open position, close before departure.
- USB Charger – Four USB charger ports are located in the living area. Two are on the driver side bench end. Two are on the passenger side sidewall panel to the right of the sink.
- 12V Socket – A 12V socket is located on the driver side sidewall under the refrigerator pedestal. If equipped with the second row seat, the socket is at knee level. A 12V/USB adapter can be used if needed. NOTE: the two 12V Sockets on the vehicle dashboard are powered off of the vehicle battery. Do not use when the vehicle not running.
- Pump – The water pump is located under the sink. The pump switch is located on the wall above the sink. Make sure the fresh tank is filled, turn On the switch to pressurize the sink. When the fresh tank is empty, the pump will gurgle and make noise since its pulling air. Turn Off the switch in order to refill the fresh tank. Continuing to run the pump will damage the pump and quickly drain the battery charge.
- Power Equipment - The power cabinet is located in the driver side front bench end. This area contains 3 vents. Please keep gear away from these areas as ventilation is needed. In addition, keep all liquids away from this area of the bench. The power system is always running and DOES NOT NEED INTERFERENCE by the occupants – all access to this cabinet is prohibited. If you experience an emergency power issue please contact the owner at 704-773-0051